

SLIPGrip[®]

Anti Slip Self Adhesive PVC Sheet



DESIGN

SUPPLY

FABRICATE

INSTALL



Our SlipGrip® Anti Slip Self Adhesive PVC Sheets are a quick and easy solution to slippery floors. Installed simply by peeling back the self adhesive and push down in place.

Dimensions: 1000mm width x 1000mm length.

A heavy layer of pressure sensitive, water resistant adhesive bonds the PVC backing to all smooth, non-porous surfaces.

You may need to prepare the substrate with SlipGrip® Safety Tape Primer available from our website or over the phone: 01440 712722.

CHARACTERISTICS

- Low profile - no trip hazard
- PVC backed, self adhesive application
- Water resistant pressure sensitive adhesive backing
- Extremely flexible - can be folded at 90° without cracking

SUITABLE APPLICATIONS

- ✓ Areas with low to medium foot traffic
- ✓ Can be used as a temporary or semi-permanent solution to a slippery area

SUITABLE SUBSTRATES

- ✓ Wood
- ✓ Concrete
- ✓ Metal
- ✓ Stone

SLIP RESISTANCE VALUES

Measured using the Pendulum test method (WF rubber slider) - certificate available on request.

Top Surface	Dry Reading	Wet Reading
Standard	103	66

To ensure that the above slip resistance levels are maintained, the anti slip sheets should be kept clean.

The UK Slip Resistance Group guide to slip resistance of a floor for able bodied pedestrians:

Four S Pendulum Value	Potential for Slip
Above 65	Extremely Low
35 - 65	Low
25 - 35	Moderate
25 & Below	High

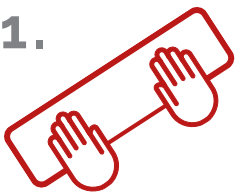
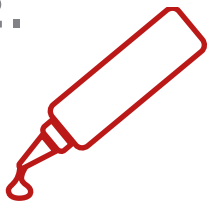
PREPARATION

- ✓ Ensure that the area is clean, dry and free from wax, oil, food residue or any other substance likely to affect the application of the adhesive. Grease and oil should be removed with SlipGrip® Standard Degreaser.
- ✓ Priming - If your surface is non-porous and dust free, priming isn't necessary. However, dusty porous surfaces should be primed with our Anti Slip Tape Primer.
- ✓ The lower the temperature, the weaker the adhesion, so don't install in temperatures below 10°C.
- ✓ You can cut the sheets with a pair of sharp scissors, so it is easy to get the shape you need.



These installation instructions are to be used as a guide. Always employ safe practices. It is recommended to first test the suitability of any fixing method on a small area before carrying out a full installation programme.

APPLICATION

1. 	Peel off the backing strip to a length of approx. 5 - 10cm, this gives you more control when laying the floor in place. Then firm the product into place with hands or a foot. If you find you've made a mistake, don't worry as this can be peeled off easily immediately after fitting, but do this straight away. Continue to peel back the adhesive backing as you push the flooring sheet into place.
2. 	If you are fitting on surfaces that could get wet, or are likely to experience heavy traffic, then we recommend you use our Anti Slip Tape Edge Sealer.

Downtime

Although these products can be walked on immediately, full adhesion takes 24 hours, so please take care with them during this period and avoid heavy use.

Storage

Keep the product warm and dry before use.



Southern Office:
Unit 2, Civic Industrial Estate,
Homefield Road Central,
Haverhill,
Suffolk,
CB9 8QP



Northern Office:
Kingston House,
3 Walton Road,
Pattinson North,
Washington,
Tyne & Wear,
NE38 8QA



www.fibregrid.com



Email: sales@fibregrid.com



Phone: 01440 712722



001